


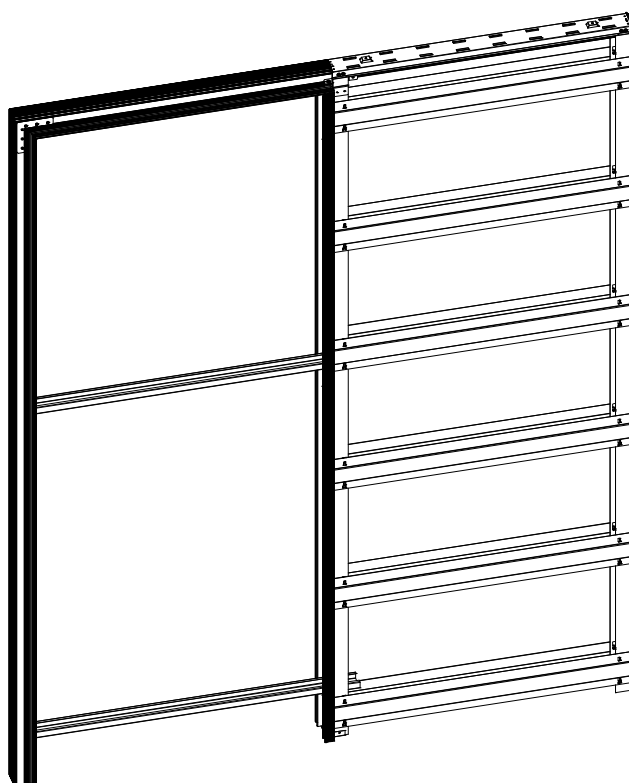

SETUP INSTRUCTION

Evokit Absolute

A.772.1rev4












CONTENTS

⚠ ATTENTION:


Care needed, sharp edges.

Standard equipment


Follow this [LINK](#) for building instructions

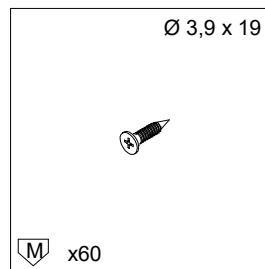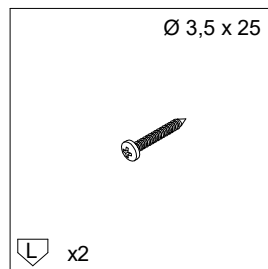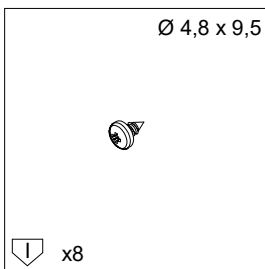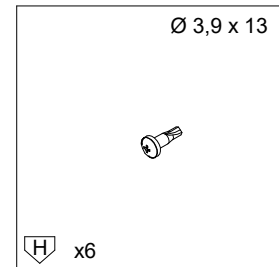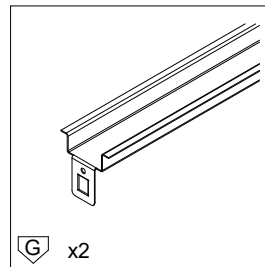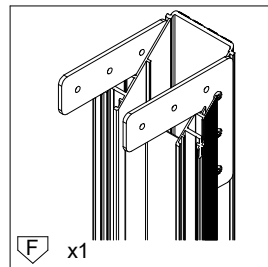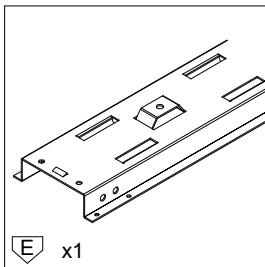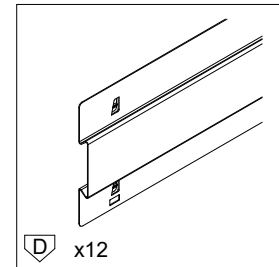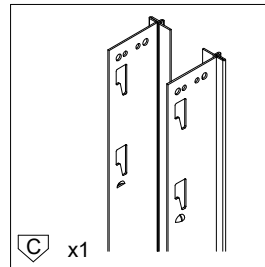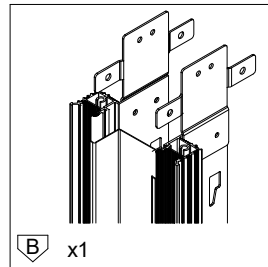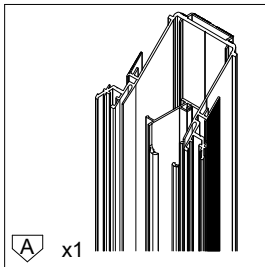

Tools

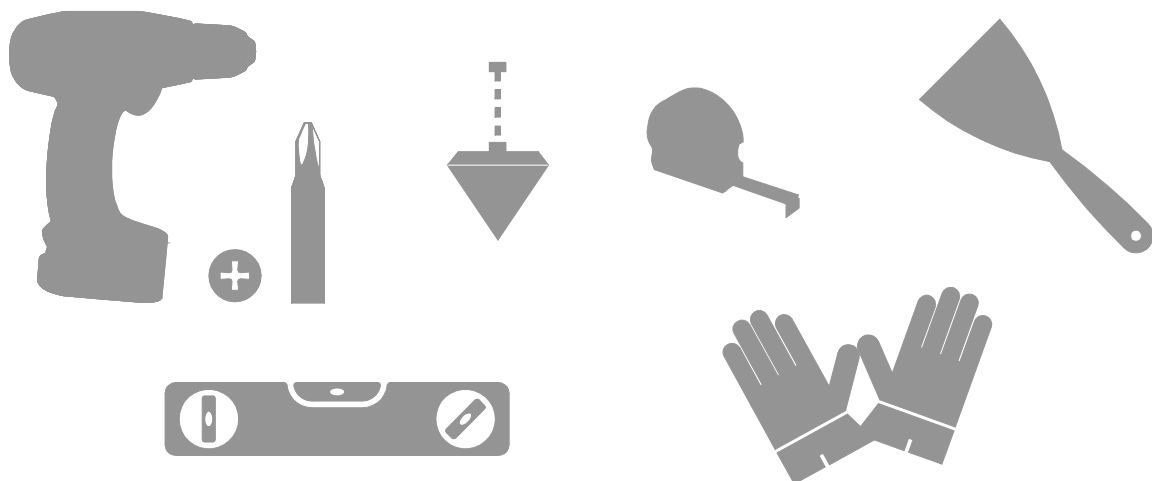


Overall view

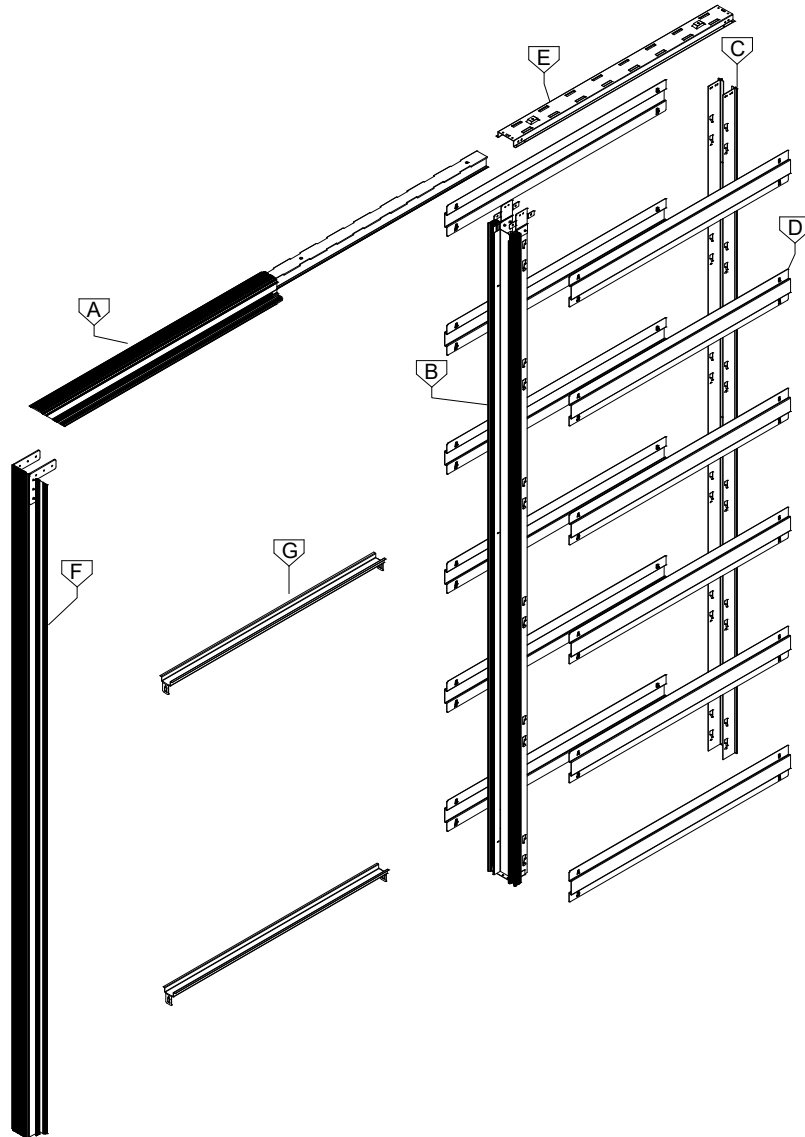


INDICE - INDEX

Setup for 100 finished wall	3-6
Setup for 125 finished wall	7-10
Setup plasterboard	11-12
Perimeter profiles plastering	13


1.1

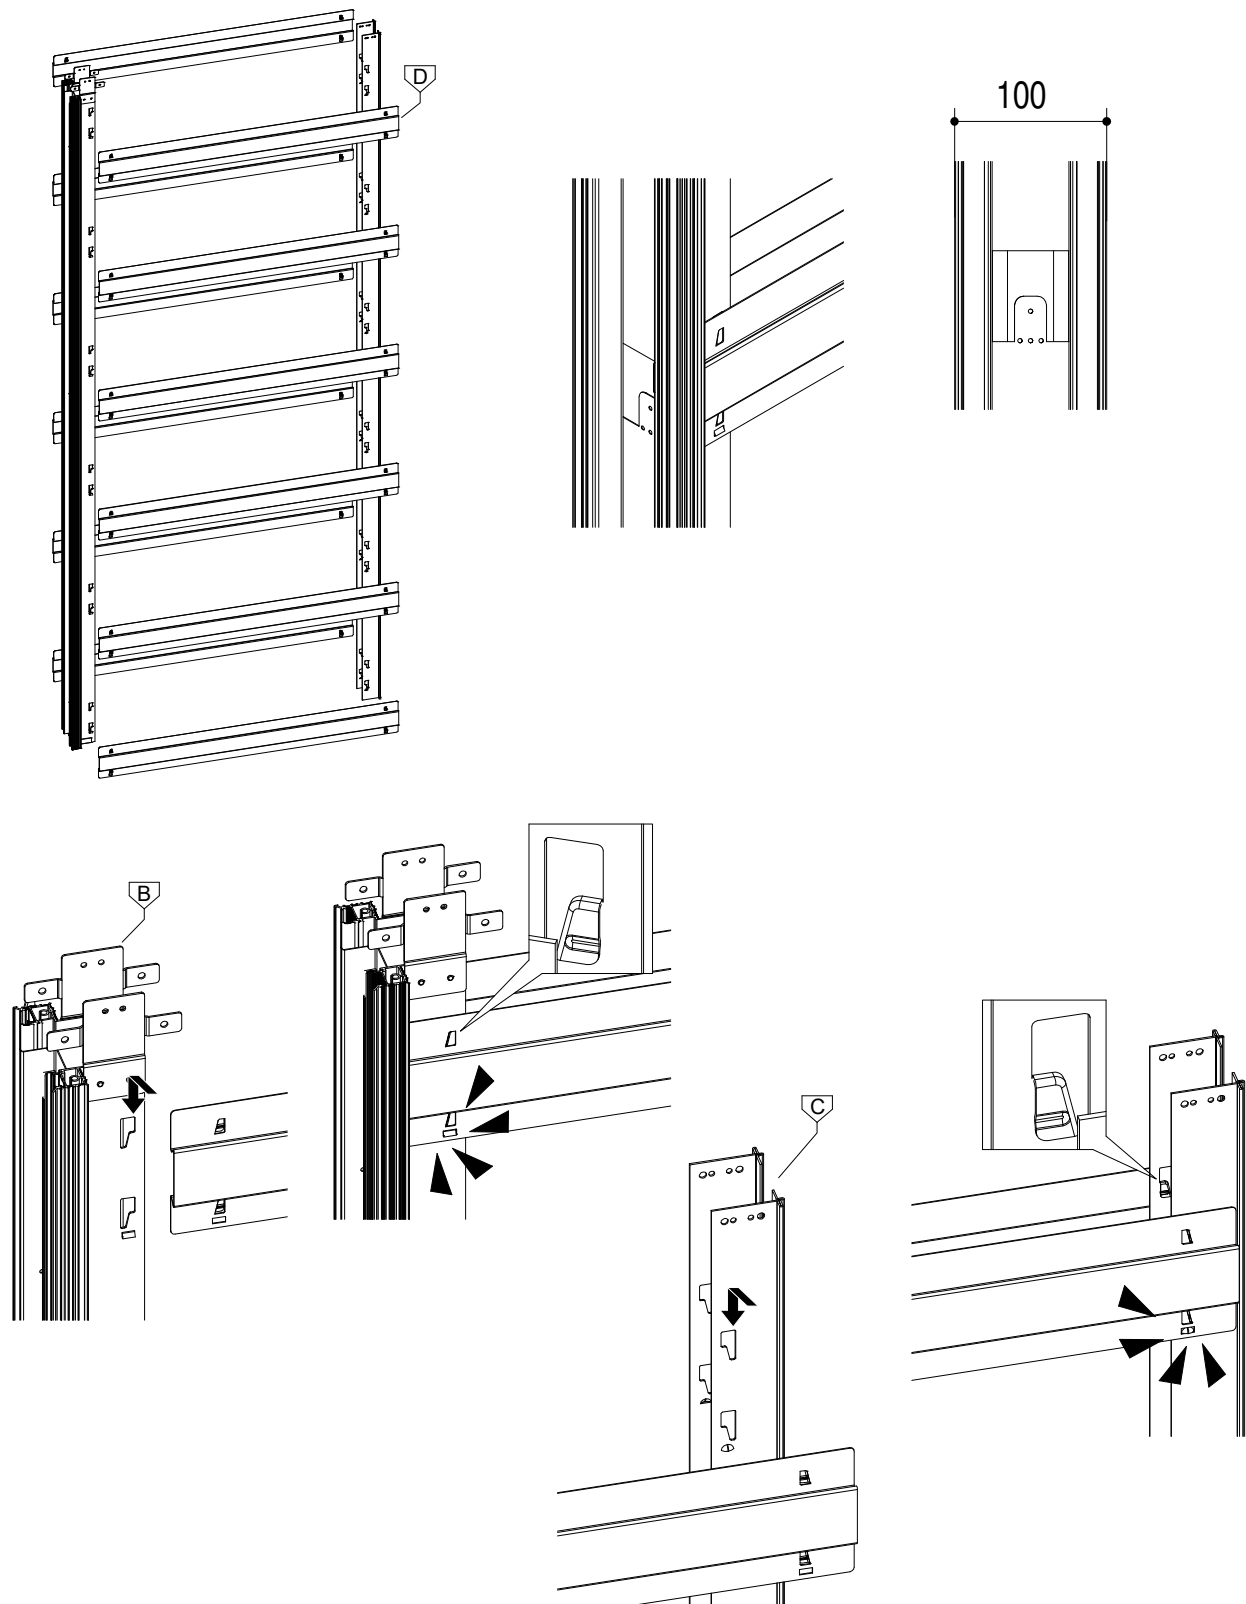





1.2

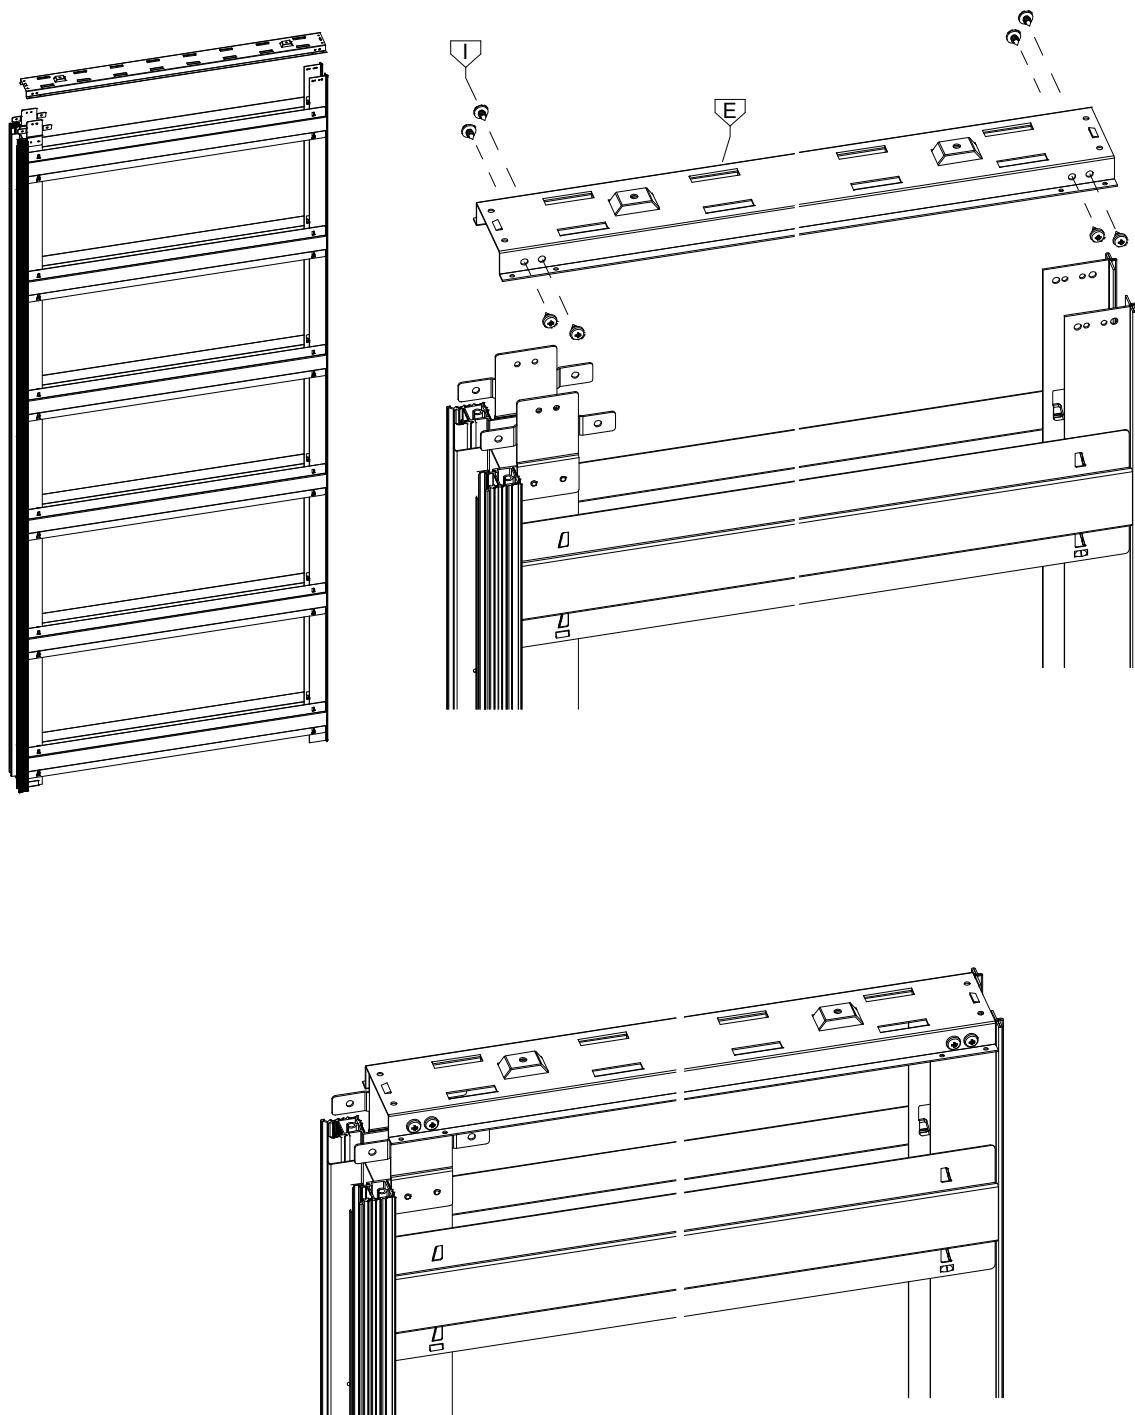


1.3

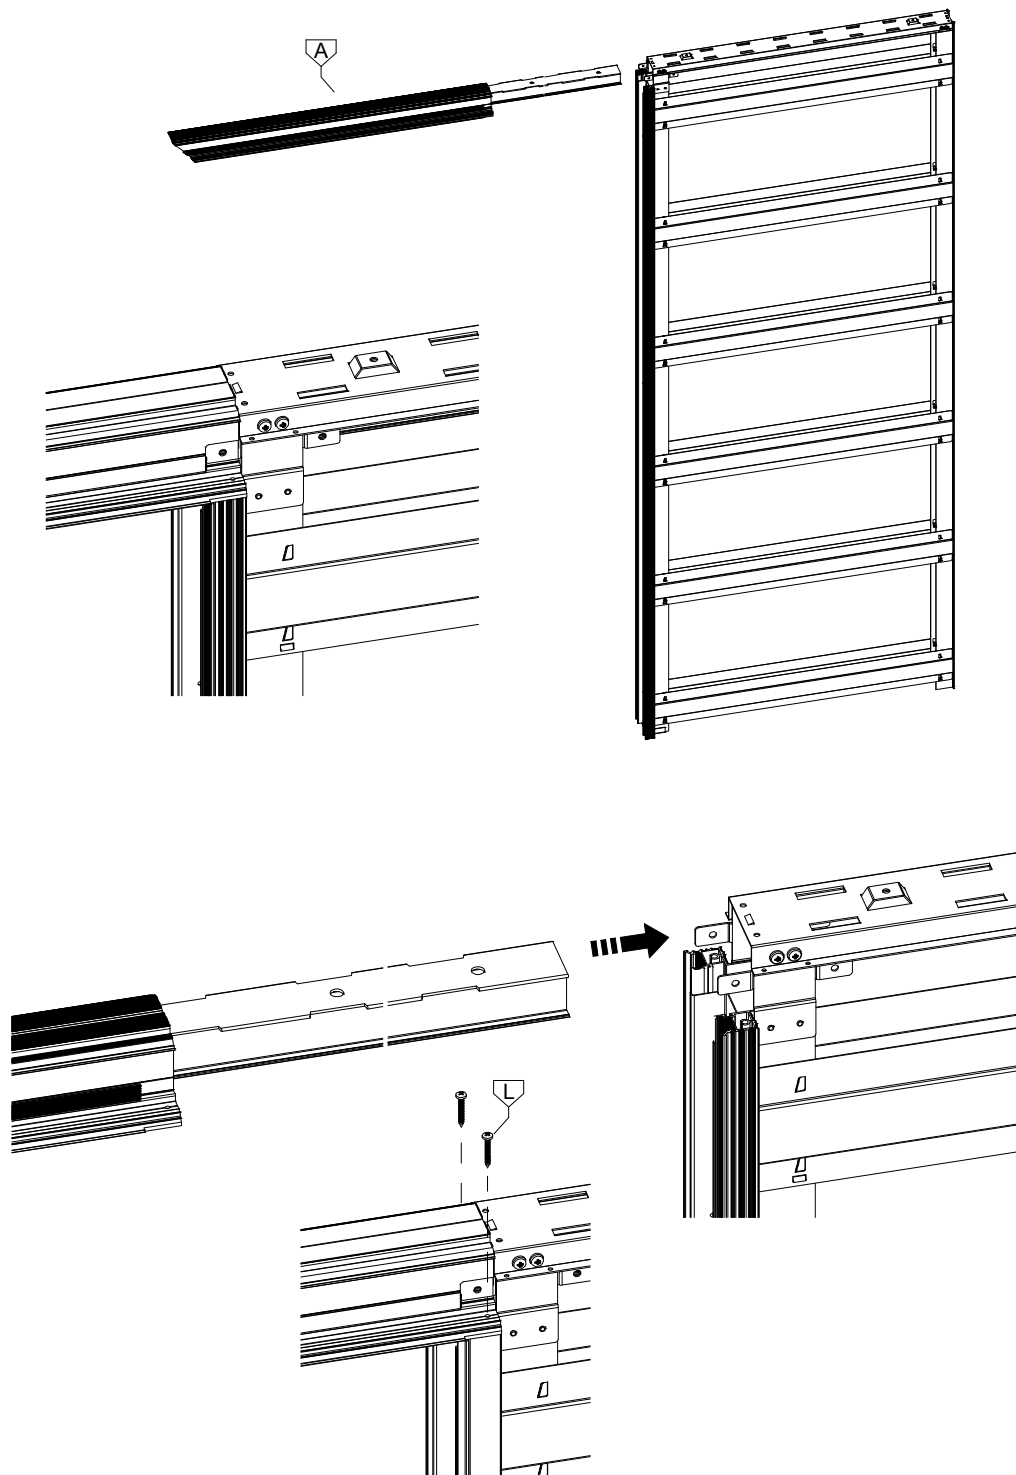


1.4

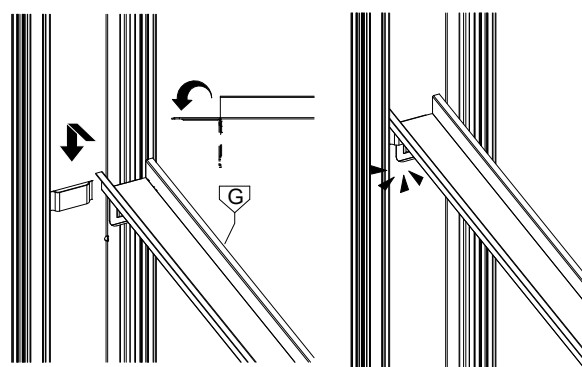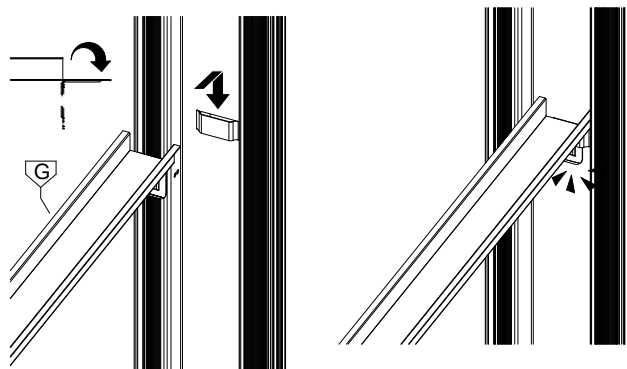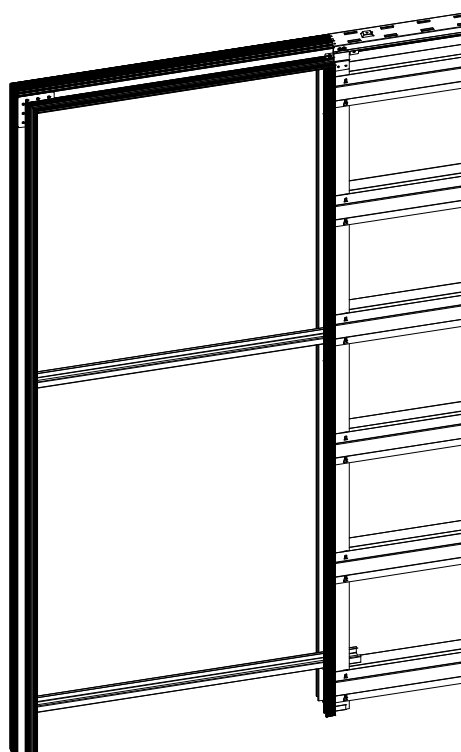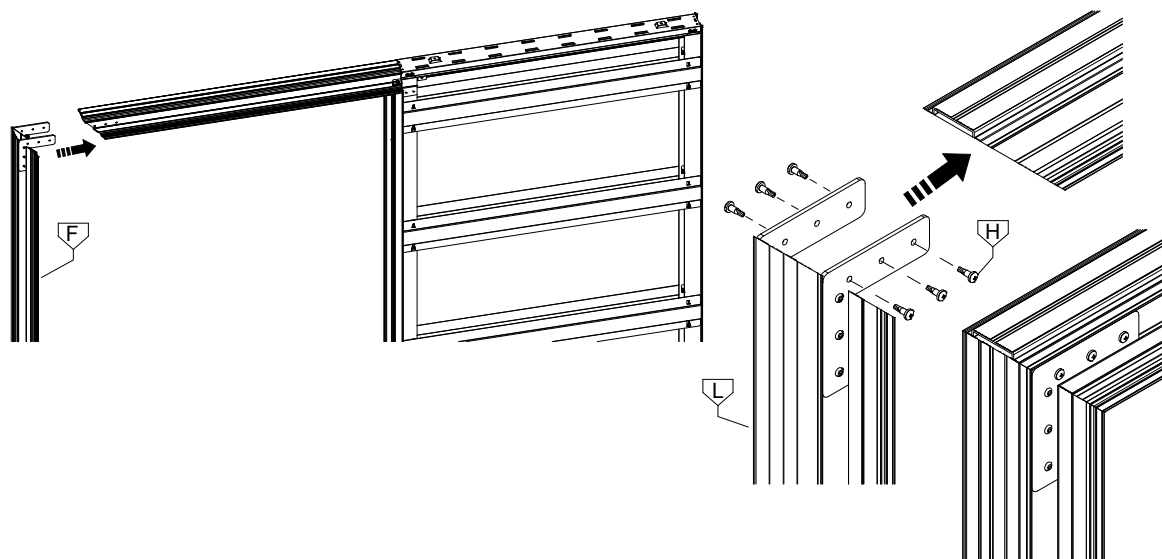


2.1

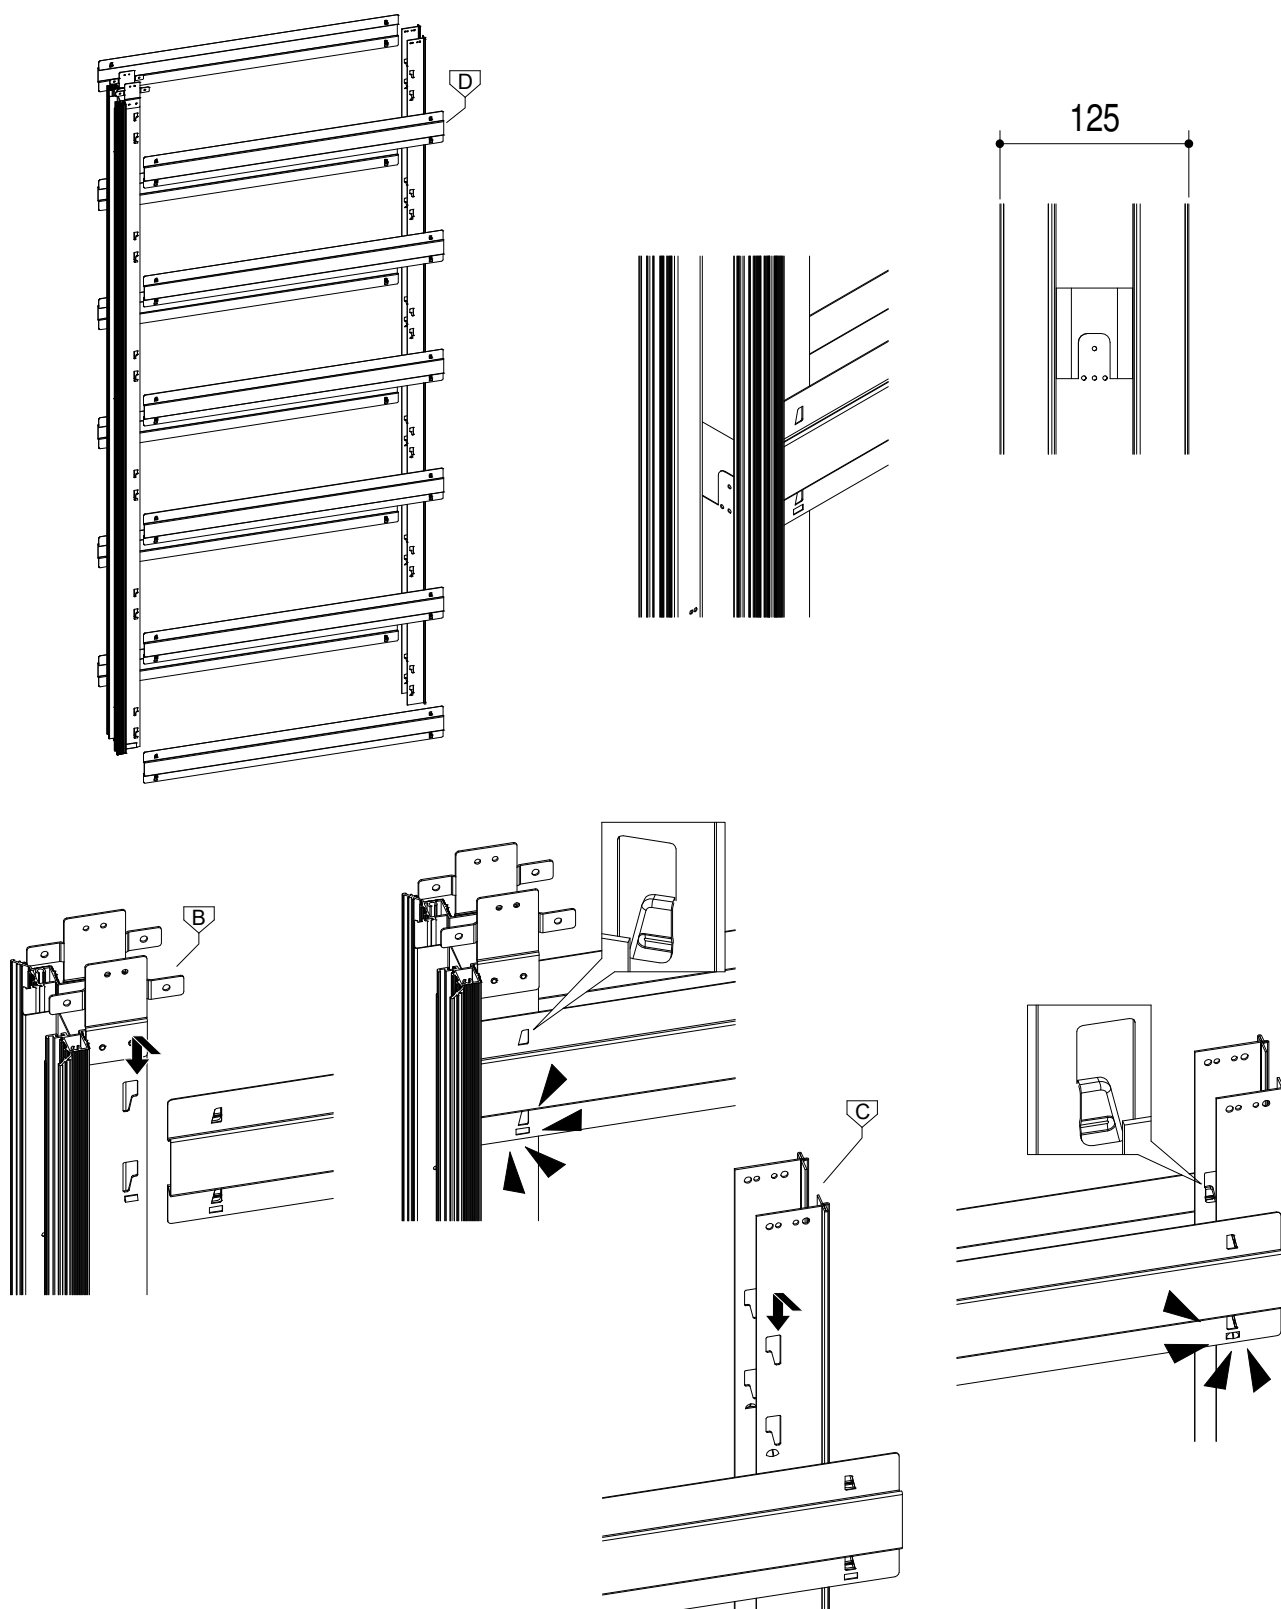




2.2

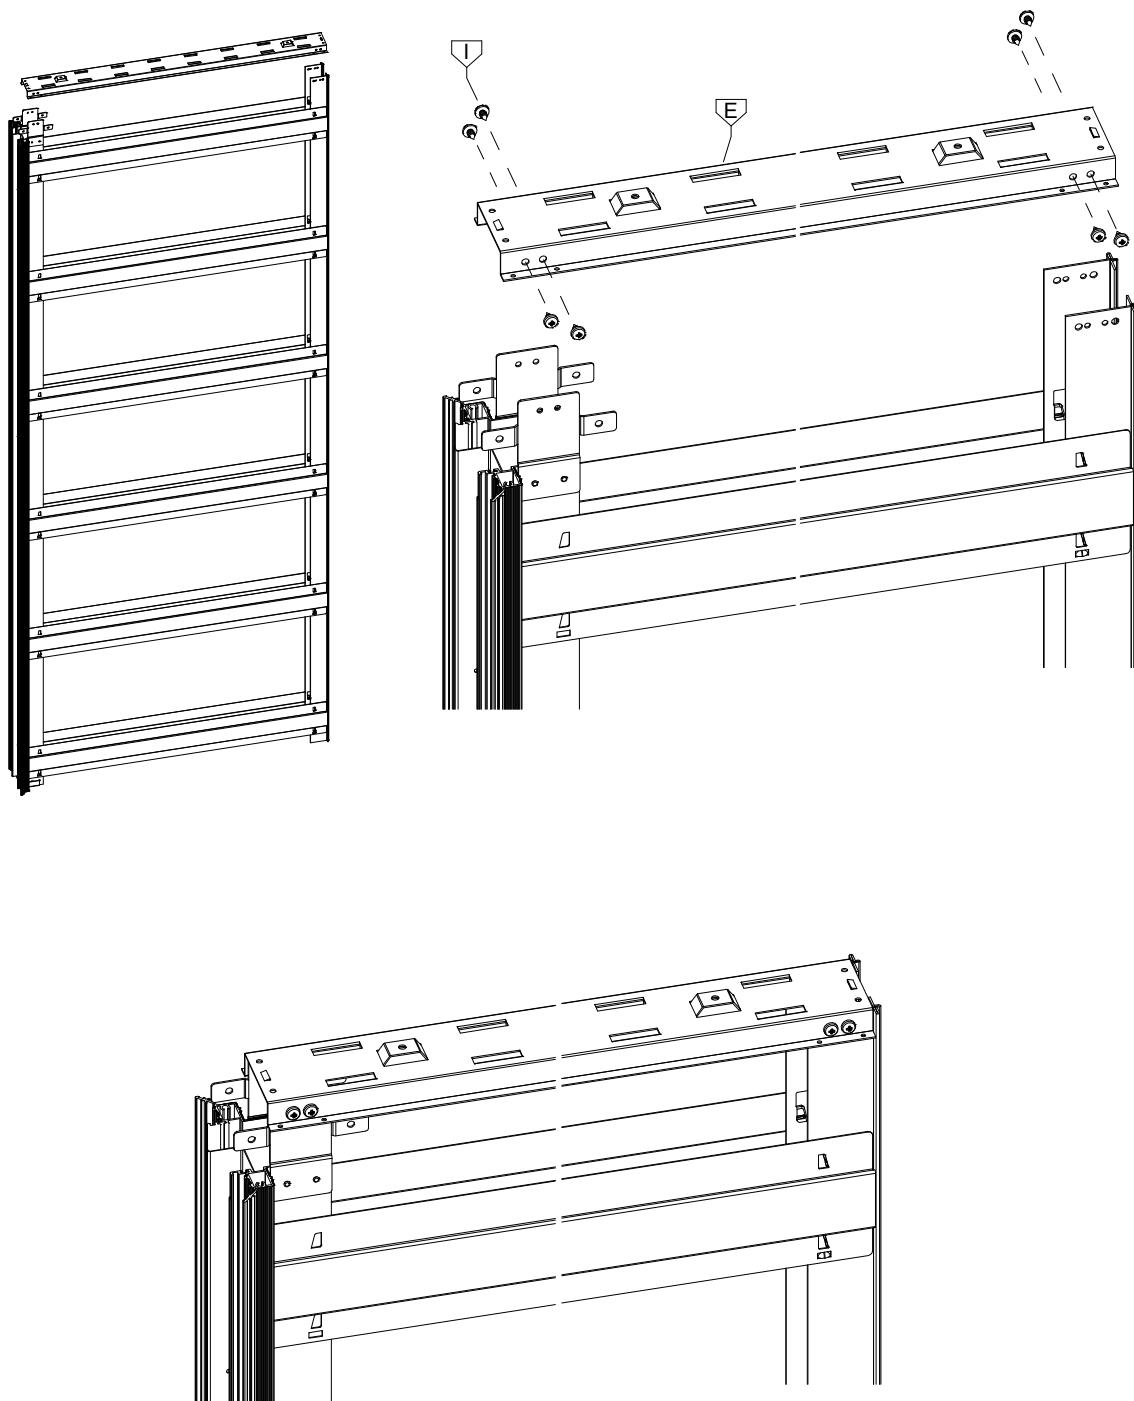


2.3

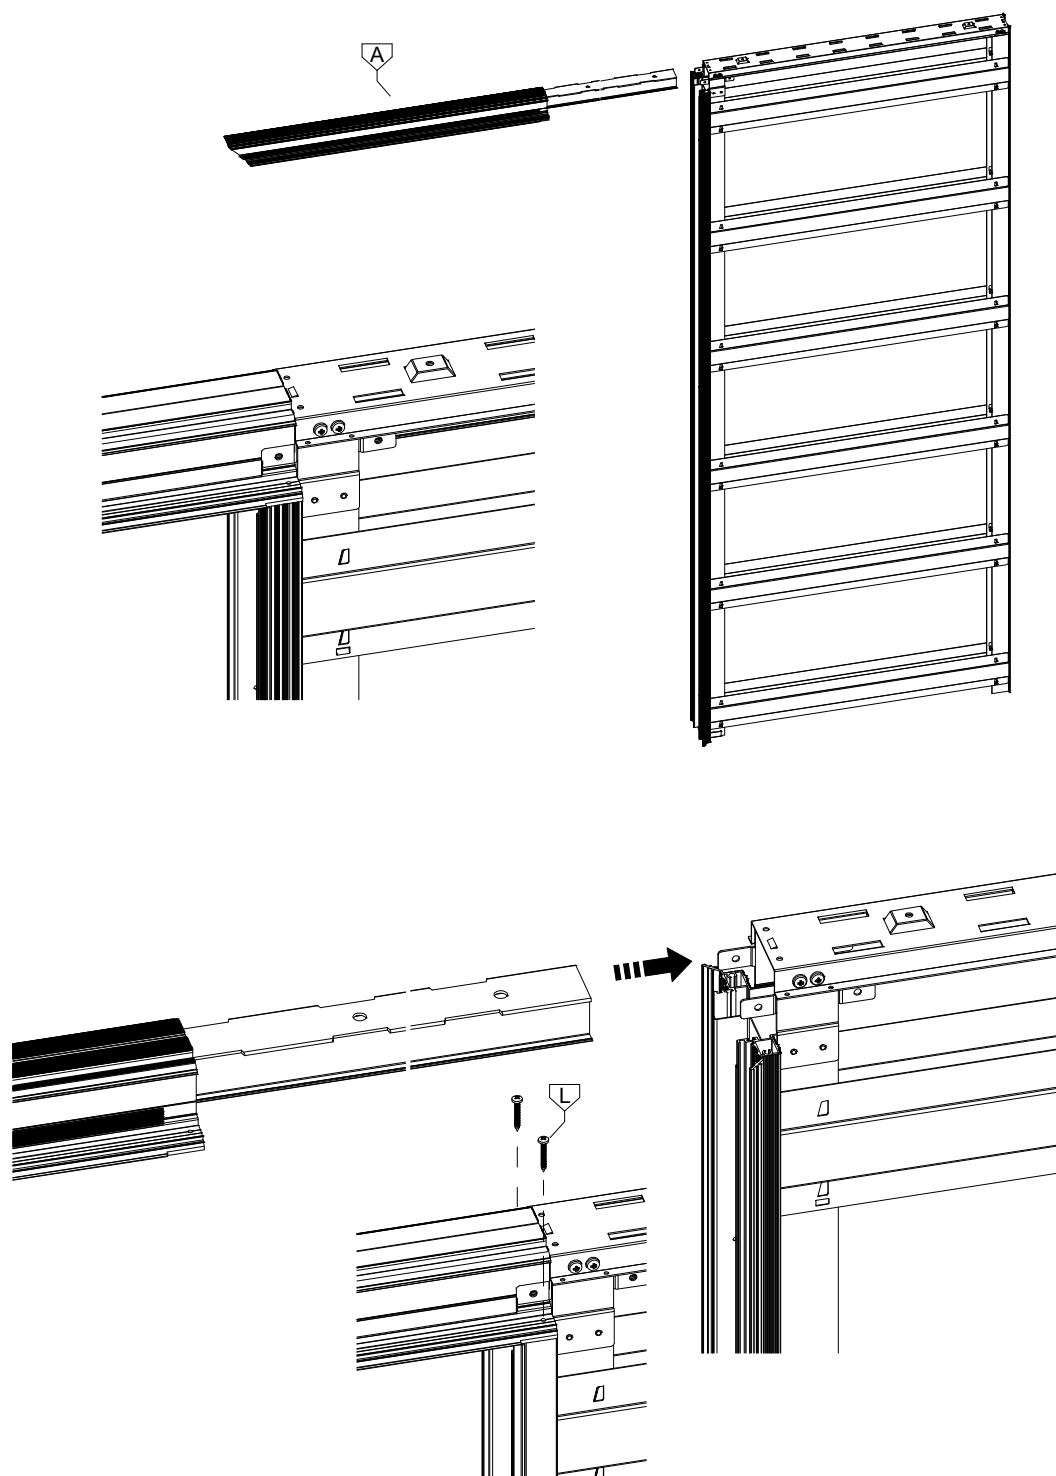



2.4

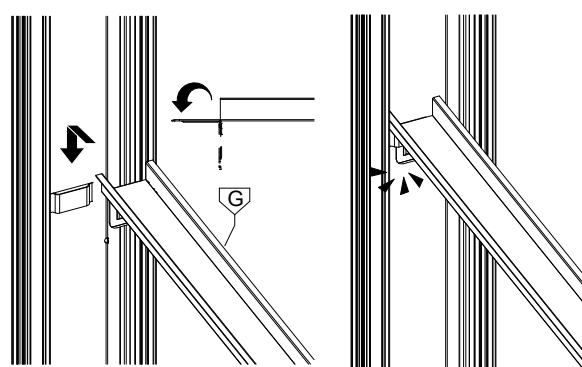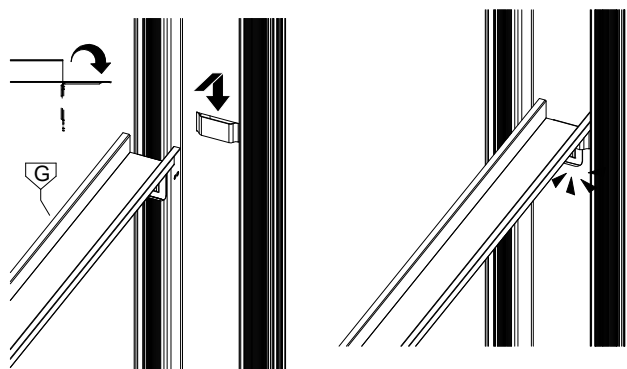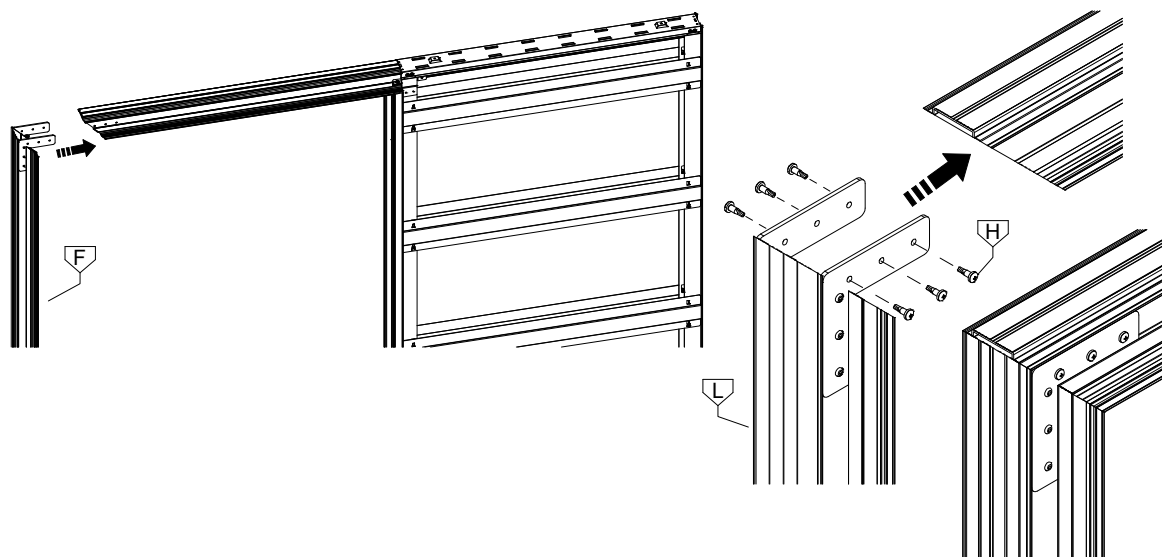

3.1

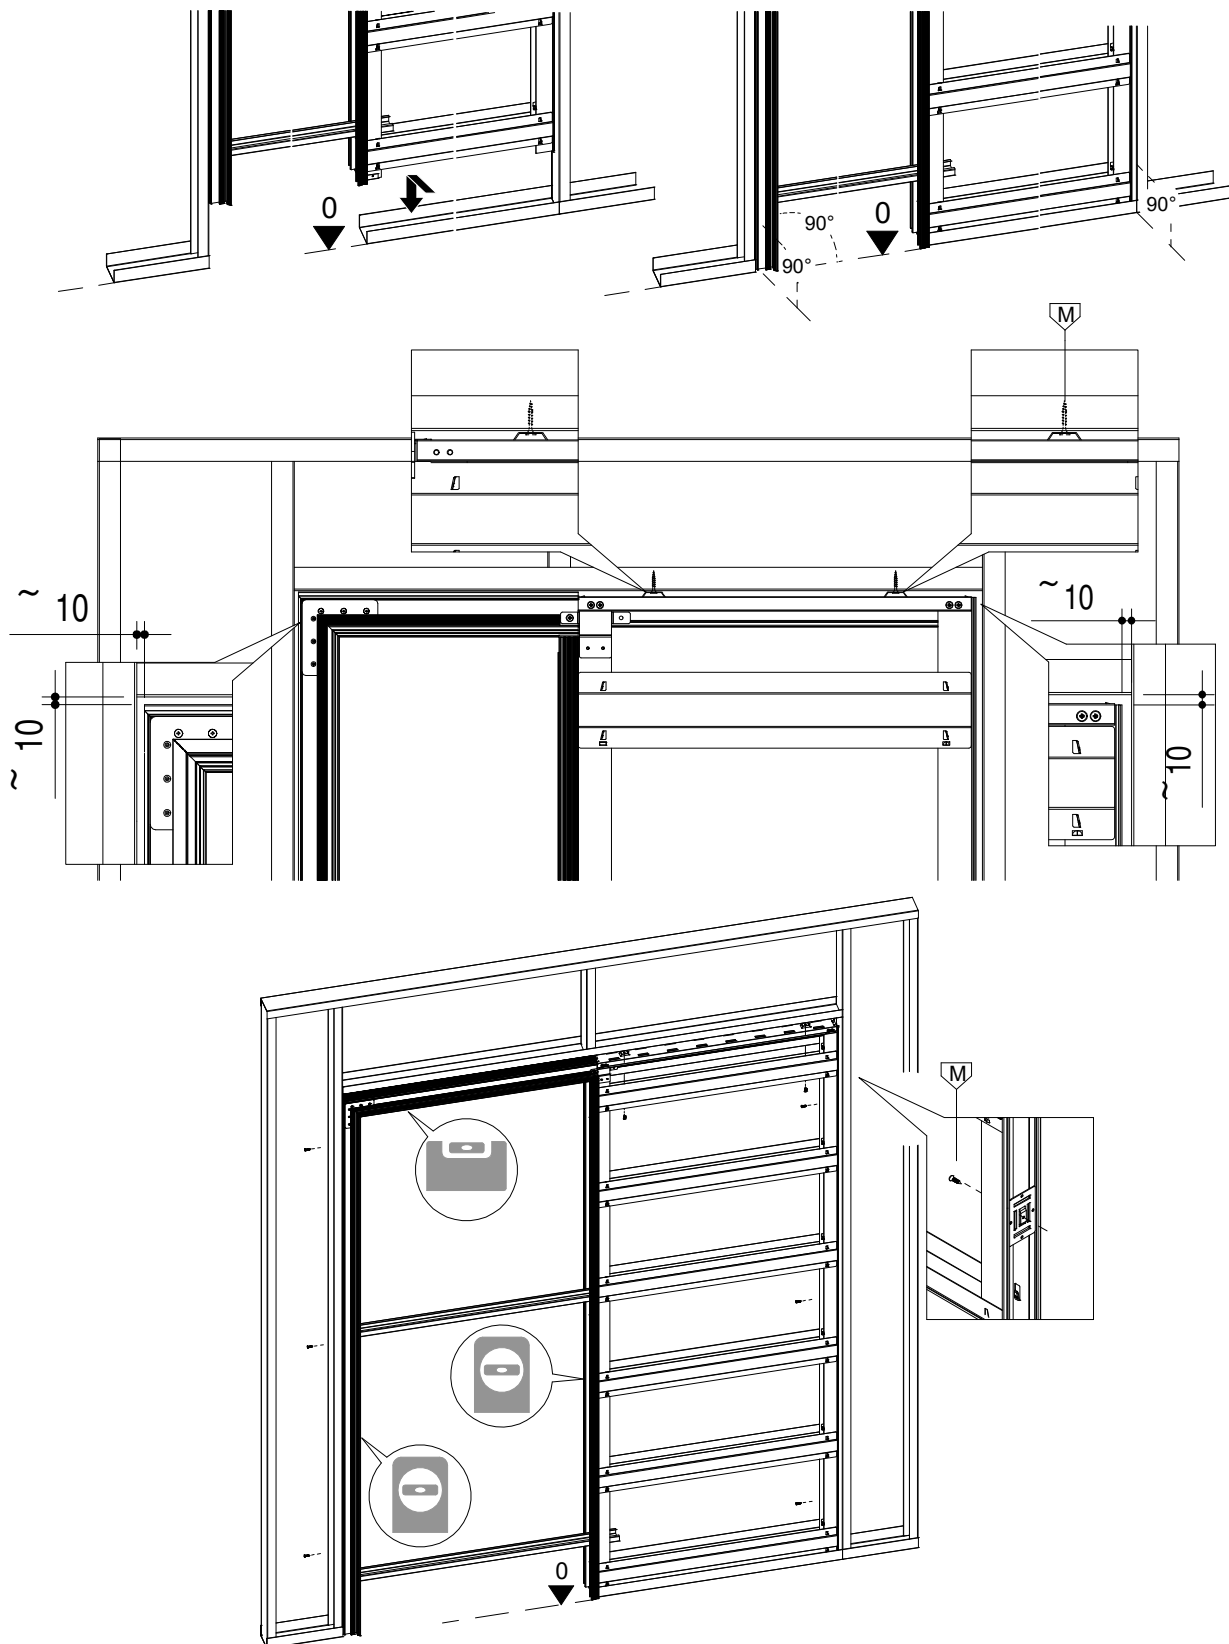


3.2

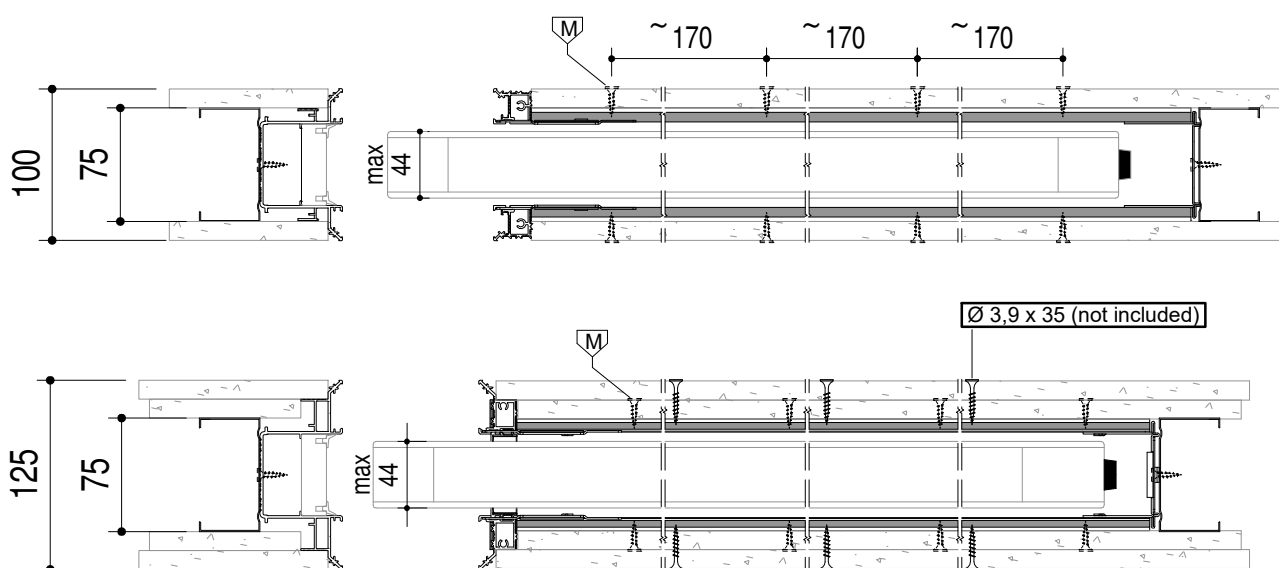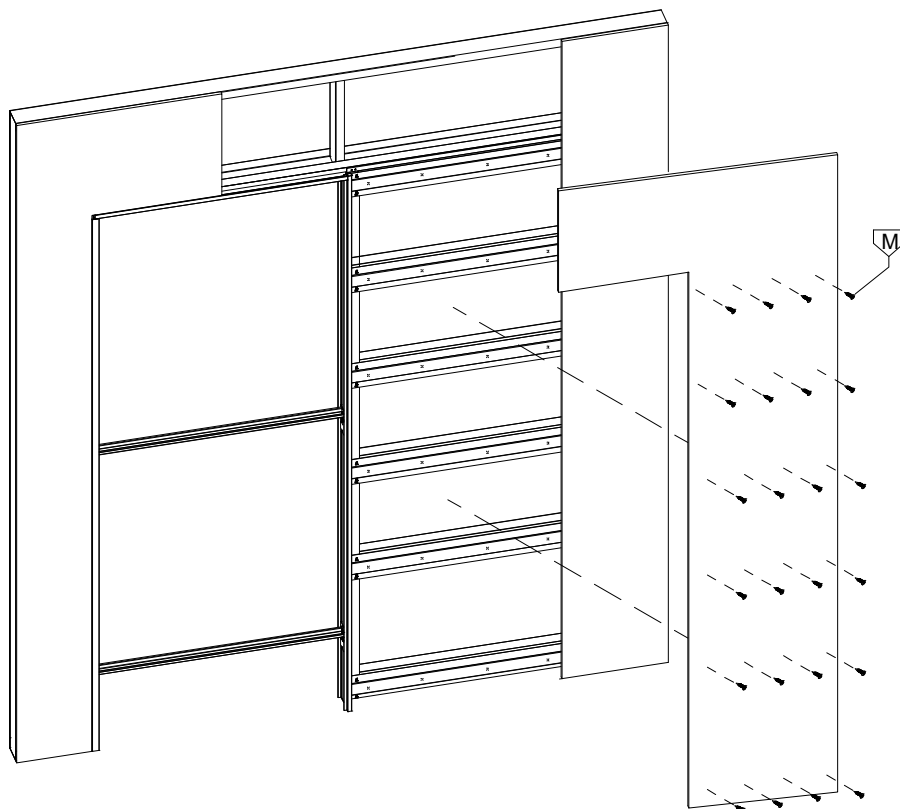


3.3






HORIZONTAL SECTION

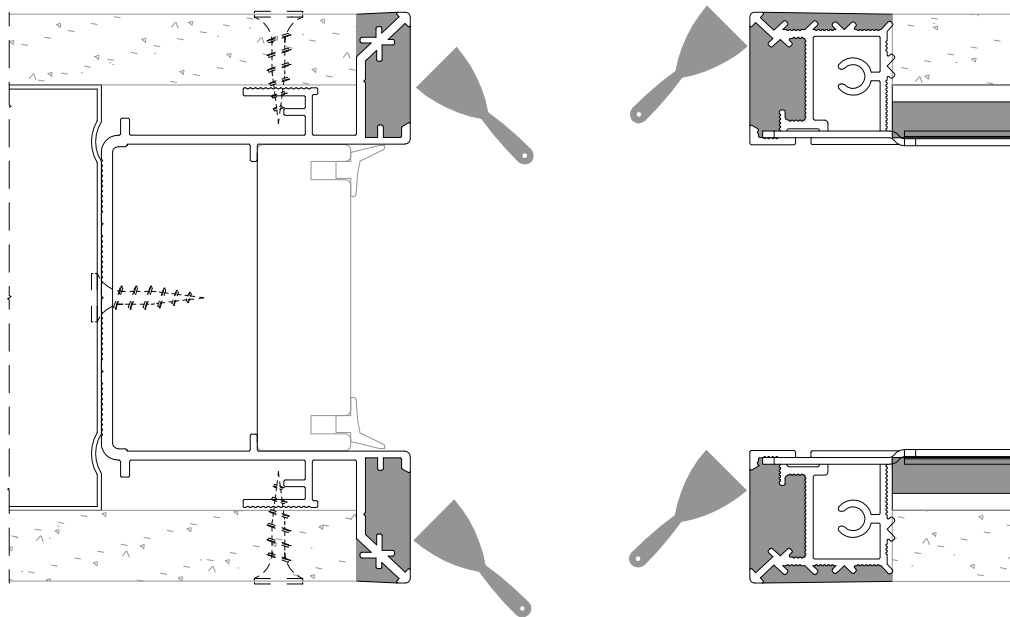

VERTICAL SECTION

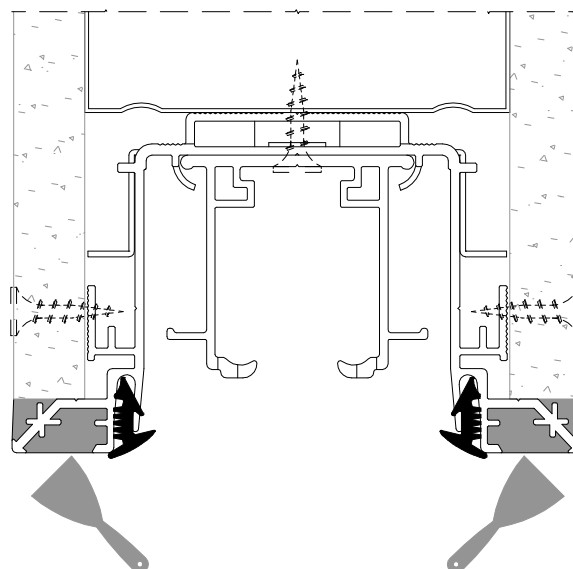

3.4

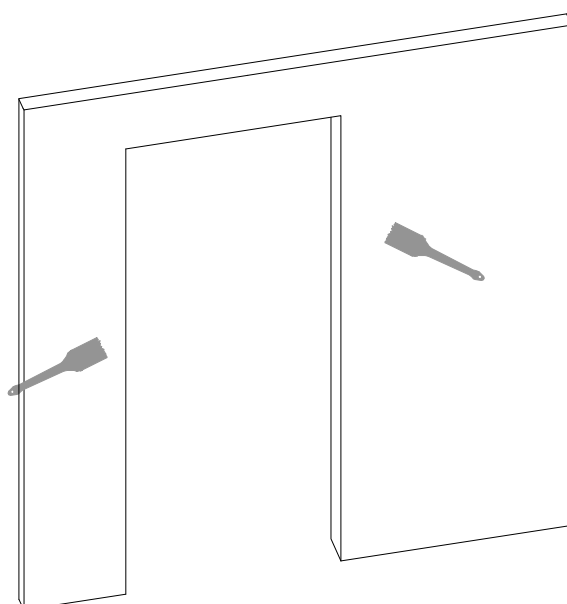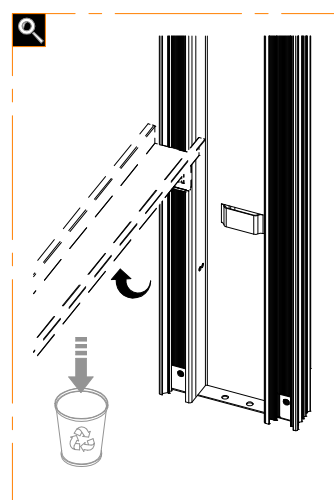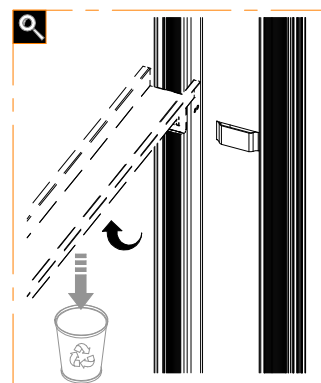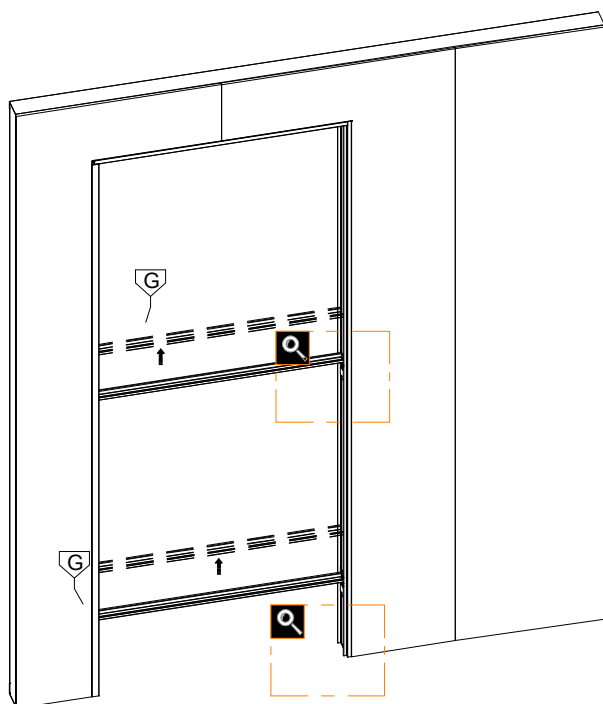

Ermetika®

DESIGN PASSAGES



T. +39 (0)883535781



info@ermetika.it



www.ermetika.it



<https://www.youtube.com/c/ermetikasrl>