


Important Notes for Installation of MALVERN doors.

These doors are designed to feature narrow door components. As such, extra care must be taken to avoid glass breakage or damage to the door construction.

1. The maximum trimming allowed on each door edge is 5mm.
2. Touch-up paint is required as the pine core will be exposed after trimming. Please find the RAL colour details below.
3. Due to the weight of the glass/panel, a minimum of 3 hinges must be used for each door.

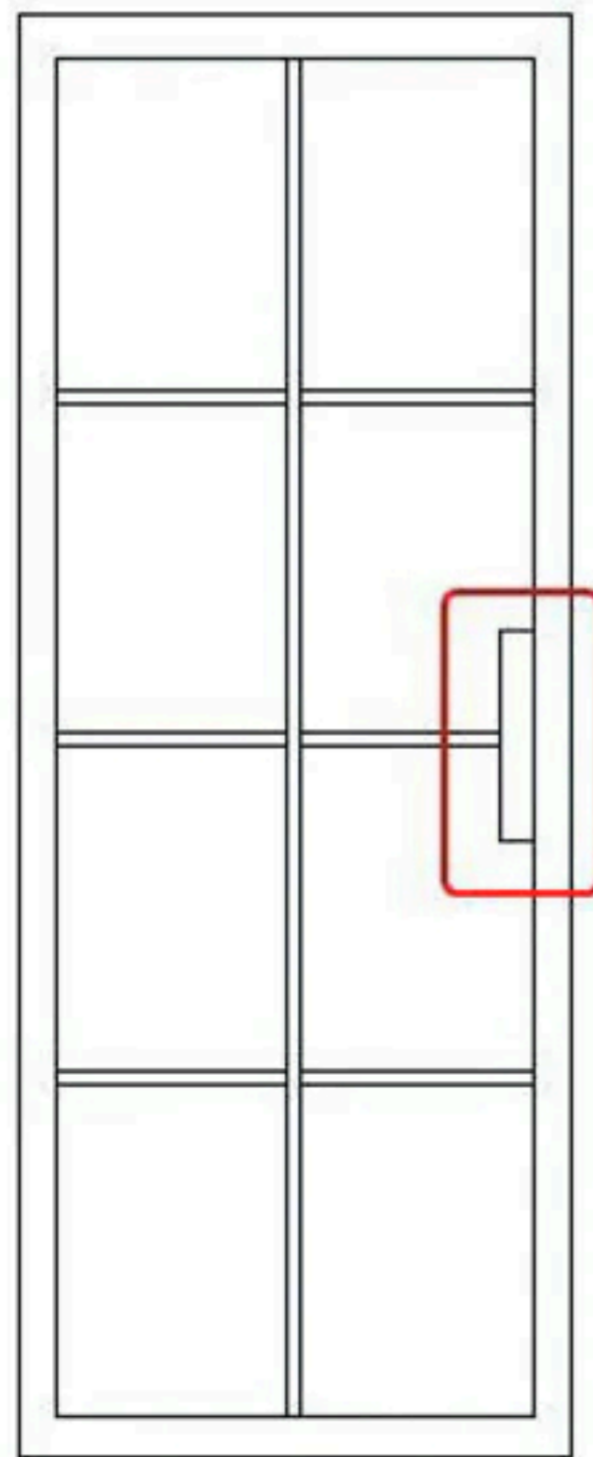

This section on the Malvern door CANNOT be used to fit in the handle or the latch/lock.

